

Santa Fe Assembly Instructions

Hardware

- 4) Hinges 
- 2) Latches 
- 24) Wood plugs 
- 2) Nuts 
- 16) 1 ¼ in. screws 
- 2) 1 in. screws 
- 20) ¼ in. screws 



(Make sure your hands are clean before assembly)

1. Remove all product contents from



2. Tilt sides of casket base up.



3. Slide left and right end panels in. Slide end panels down until flush with top.



“Leading the Change in the Funeral Industry”

Santa Fe Assembly Instructions

- 4.** Measure 4 1/2" from the back of the tub on the head end.




- 5.** Staple the 18" piece of Velcro hook to the top of the head end of casket.



- 6.** Measure 1 1/2" from the front head end of the casket and staple 44" Velcro hook in.




- 7.** Continue to staple 52" Velcro hook around the rest of the tub.

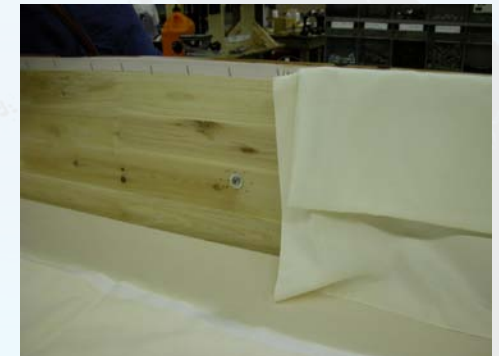

Santa Fe Assembly Instructions

- 8.** Now install the Velcro loop on the back side of the fabric to the Velcro hook on the inside of the tub.

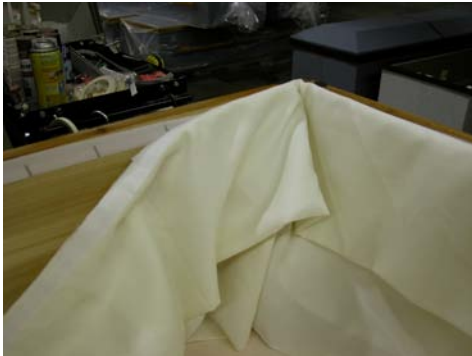

- 9.** Use 16, 1 1/4" screws (8 per side) to attach sides and end



- 10.** Mount hinges to lids in pre-punched holes as shown using 8, 3/4" screws.



- 11.** Mount latched in recess in lid using 4, 3/4" screws



Santa Fe Assembly Instructions

- 12.** Use 8, 3/4" screws to mount lids to base.
(May require two people)



- 13.** Remove foam from prop hinge and straighten hinge. Place 1, 1/2" screw through the hole in prop hinge. Attach screw to base as shown. Repeat for both sides.



- 14.** Lightly tap wood plugs in all exterior holes.

- 15.** Place interior fabric in casket as shown.



Thank you
for your purchase from

WATERL ™
International Funeral Supply

Questions, comments, or missing hardware?
Call 260.837.4061
and we will be happy to assist you.

"Leading the Change in the Funeral Industry"